


Steam not at home with a
showerdome

Note: When measuring your shower for fitment always measure from the corners to the "INSIDE" of the shower frames. (On a shower with 3 tiled walls, measure tiled corner to tiled corner also.)

Shower cubicles under 710mm or over 1180mm, Contact Showerdome Ireland for other options.

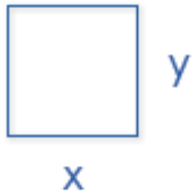



SQUARE SHOWERS..... USE

710mm to 760mm = R650S
760mm to 860mm = S700S
760mm to 1160mm = S700L
860mm to 960mm = S800L
960mm to 1160mm = S900L



OBLONG SHOWERS ... USE

Less than 760mm wide x up to 1000mm long = R650S
760mm to 860mm wide x up to 1000mm long = S700S
760mm to 1040mm wide x up to 1160mm long = S700L
Over 860mm wide x up to 1180mm long = S800L
Over 960mm any direction to 1190mm = S900L

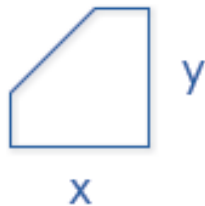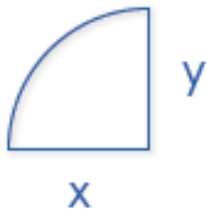

QUADRANT and 5 SIDED 'TRIANGULAR' SHOWERS ... USE

Less than 860mm on the wall sides = R650
860mm to 950mm = C800S or T800S
Over 950 mm to 1160mm = C800L or T800L